

Details of installation

Wires collection

Take apart the ornament cap of main bar (2-5) after connecting the GPCM Main Bar Overview to the fixation (1-1), then stay the power cord into the storage gap. Atlast, re-install the ornament cap of main bar(2-5) as figure6, 7a and8.

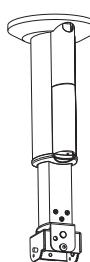


figure 6

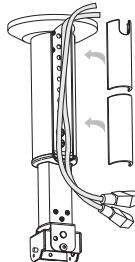


figure 7

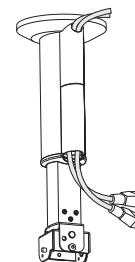


figure 8

Height Adjustment

Take apart the ornament cap of main bar (2-3) and loosen the front positioning screws. Adjust the subsidiary bar (2-3) to required position, and then install the ornament cap of main bar (2-3) as figure 9 (the main bar of GPCM-D30/40 is separated by 8 segments, each segment is 16mm; the main bar of GPCM-D40/60 is separated by 15 segments, each segment is 1mm).

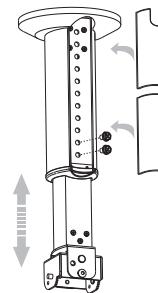


figure 9

Angle Adjustment

1. Loosen the positioning screws (front and back) for adjusting the angle, and then rotate the screwdriver for fine turning to the required angle as figure 10.

2. Loosen the positioning screws (left and right) for adjusting the angle, and then rotate the screwdriver for fine turning to the required angle as figure 11.

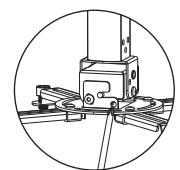


figure 10


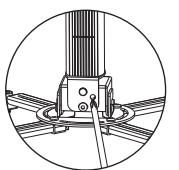


figure 11

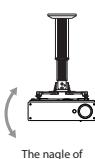

The angle of vertical tilt: $\pm 15^\circ$

The angle of horizontal tilt: $\pm 5^\circ$

Installation of main bar

1. Firstly, please confirm how many installation holes the projector has? 3 or 4.
2. If there are 3 holes, the installation arms (4-2) need to be taken apart from Installation bracket firstly. Connect 3 installation arms(4-2) to the projector, and then connect the installation arms(4-2) to the installation base (4-5). However, the installation base needs to be the center of projector. Figure 1 2.
3. Connect the installation arms to the projector conversely if the distance of installation holes is less than 120mm. Connect the installation arms (4-2) to the installation base (4-5) via sliding installation button (4-4) as figure 1 3
4. Rotate the adjustable nuts (4-3) for adjusting the height of installation arms (4-2) if the installation holes are not at the same level as figure 1 4.
5. The front or back of adjuster must be parallel to the surface of projector as figure 1 5.

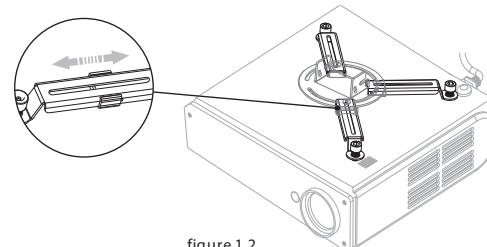


figure 12



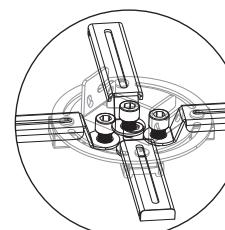


figure 13

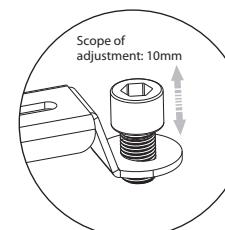

Scope of adjustment: 10mm

figure 14

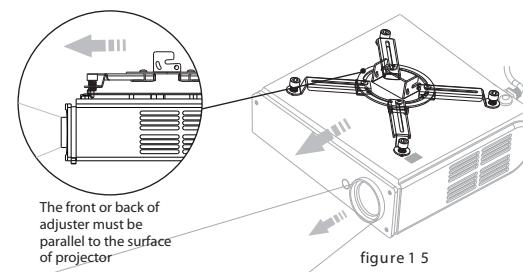

The front or back of adjuster must be parallel to the surface of projector

figure 15


Instruction Manual

Projector Ceiling Mount

Applicable Model

GPCM-D30/40

GPCM-D40/60

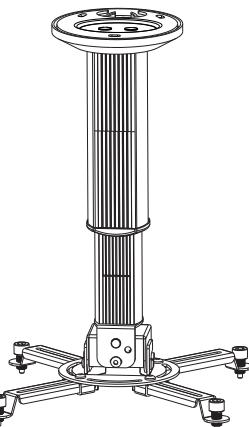

Please read before using

Thank you for purchasing our products. Please read the instruction manual carefully in order to ensure this projector lift is suitable for your projection equipment.

Cautious



Warnings

For safety, the minimum weight of ceiling must be 20KG



Caution

Please do not incline the projector extremely.



Do not take apart

Please do not take apart the accessories of projector ceiling mount.

Grandview Crystal

Screen Canada Ltd.

#11-3751 North Fraser Way,
Marine Way Business Centre,
Burnaby, BC, Canada V5J 5G4
Tel: 1-604-412-9777
Fax: 1-604-412-9796
Website: www.grandviewscreen.ca

Guangzhou Grandview

Crystal Screen Co., Ltd.

P.O. 511400 Federal Ind. Zone No. 363,
Yushan West Road, Shiqiao, Panyu
District, Guangzhou, Guangdong, China
Tel: +8620-8489-9499
Fax: +8620-8480-3343
Website: www.grandviewscreen.com

Parts

GPCM-D is combined by GPCM and GPD

GPCM Main Bar Overview

1-1 Fixation

1-2 Top Cap

2-1 Main Bar

2-2 Subsidiary Bar

2-3 Ornament Board of Main Bar

2-4 Ornament Board of Subsidiary Bar

2-5 Ornament Cap of Main Bar

GPD Adjusting Overview

3-1 Adjuster

3-2 Hanging Button

3-3 Horizontal Adjusting Hole

4-1 Installation Bracket

4-2 Installation Arm

4-3 Adjustable Nut

4-4 Sliding Installation

Button

4-5 Installation Base

4-6 Vertical Adjusting

Button

Accessories:

① M6x20 Tapping Screw (3sets)

② M4x10 Philips Screw/

Washer/Spring Washer (4sets)


③ M4x8 Socket Cap Screw (6pcs)

④ M5x8 Philips Screw (6pcs)

⑤ M3x30 Philips Screw (4pcs)

⑥ M4x30 Philips Screw (4pcs)

⑦ M5x30 Philips Screw (4pcs)

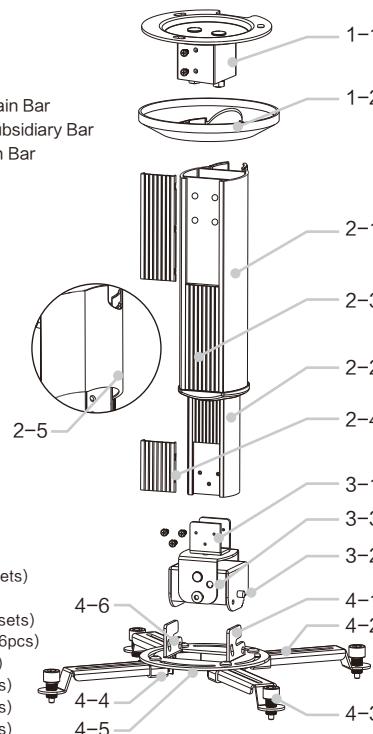


Scope

Scope for installation (H is the distance between ceiling and projector)

The H of GPCM-D30/40 is 300mm~400mm

The H of GPCM-D40/60 is 400mm~600mm

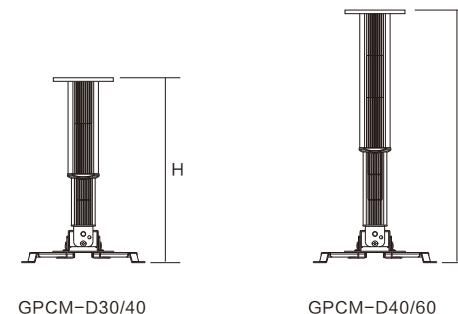

Three steps of installation

- 1 Install the fixation on the ceiling (screws of accessory①) as figure 1. GPCM-D can be installed to the concrete-roof with ceiling or without ceiling, such as figure 2 and figure 3.

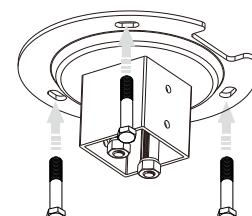


figure 1



figure 2

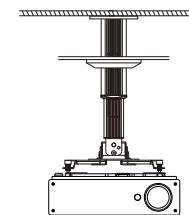


figure 3

Three steps of installation

- 2 Connect the GPCM Main Bar Overview to the fixation (screws of accessory②). Store the power wire, and then fasten the front and back screws of main bar. Finally, install the ornament board of main bar as figure 4.

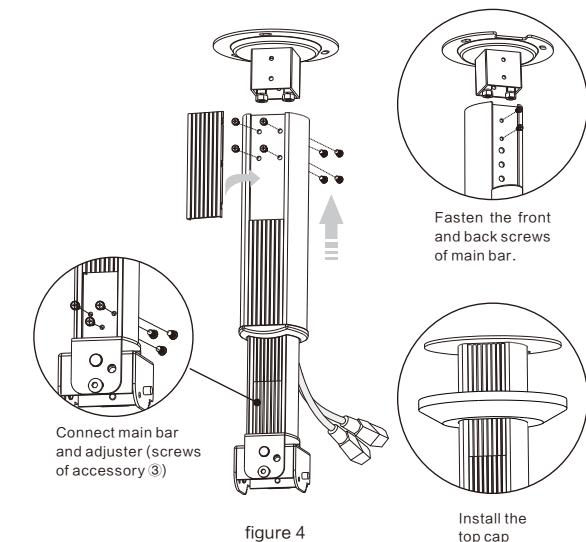


figure 4

Install the top cap

- 3 Hang the installation bracket (projector has been installed) to the adjuster as figure 5. And then put in the screws (accessory④), but do not faster.

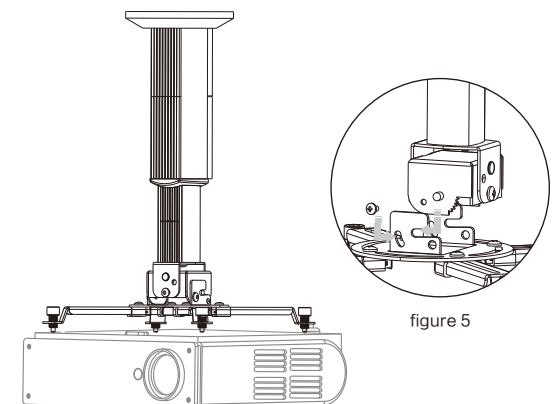


figure 5


Scope

Scope for installation (Installation hole of projector):


Maximum scope for installation:310mm diameter

Minimum scope for installation:40mm diameter

Note: Connect the installation arms to the projector conversely for different installation holes of projector.

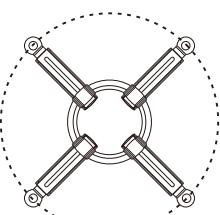

Maximum diameter: 310mm

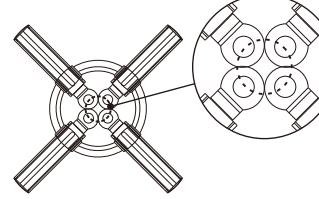

Minimum diameter: 40mm