Motorized screen (M) manual control method:

- Screen manual control in-line switch (Figure 1)
- Extend screen (Figure 2): Press "=" switch, screen will automatically lower down to desire limit position.
- Retract screen (Figure 3): Press "-" switch, screen will autoatically retract to setting limit position.
- Stop screen: Press middle "o" switch, screen will stop immediately.



Motorized screen (M) circuit diagram:



Screen retract height (Up limit) and extend height (down limit) adjustment:

• If have to adjust height limit for installation environment reasons, you can adjust the limit setting by using a provided adjustment bar insert into the adjustment hole which on the left down area of motor. As below figure:

Note: When screen retract height over the setting limit, fabric will automatically lower down. For this case, please press stop switch (By manual or RF control), micro adjust on green knob in clockwise direction is fine.





 Trouble shooting: Product has the over retract protection system. When screen over retract, under bar will automatically lower which means have to reset the up limit. Please check motor limit setting method for reference.

Note:

Please operate carefully, in case of screen over retract causing motor or screen damage.While extending more fabric, please add black boarder within 10CM or it will cause fabric break and fall.

Screen electric data:Voltage AC220-230V/50-60Hz, current 0.5A, power 100W.

RF remote (F):Voltage 3V, use CR2450*1 battery, ratio frequency: 433Hz. maximum control distance 15m.

IR remote (R):Voltage 12V, use 27A*1 battery, maximum control distance 8m.

liberty Grandview

liberty Grandview

Maintain Screen:

For long lasting enjoying the best viewing experience of Grandview screen, please retract screen into casing while not use. Before retracting into casing, please check screen front and back side to ensure surface has no obvious dust, insects or anything dirty. If there's anything dirty, please use soft cloth clean it carefully first.

Cleaning Screen:

Please use warm water mixed with mild detergent slightly clean the dirt on screen casing or surface (Please clean gentle instead of roughly). Then use a clean soft cloth or towel dry it, please be noted it can't be natural air drying.

Please don't use any solvent or chemical liquid or any frictional cleaner, or these cleaner will cause permanent damage on fabric.



 EQUIPMENTS (INDIA) (P) LTD.
 Mktg. Off: 1-20-248, 2nd Floor, (Snowcem Paints Lane), Rasoolpura, Secunderabad-500 003, A.P., INDIA.
 Tel: +91(0)40-2781 5419 / 2781 4350 / 2789 0599 / 2781 8419 / 20 / 21
 Fax: +91(0)40-2781 5399 (Off.) / 2781 4612 (Mktg)
 Mobile: + 91- (0) 99590 24099 / 98490 24099
 E-mail: sales@av-visionindia.co.in
 Website: www.av-visionindia.co.in

Grandview Crystal Screen Canada Ltd.

#11- 3751 North Fraser Way, Marine Way Business Centre, Burnaby, BC, Canada V5J 564
Tel: 1-604-412-9776 Fax: 1-604-412-9796
Website: www.grandviewscreen.ca

Guangzhou Grandview Crystal Screen Co., Ltd.

No.43 South International Trade Avenue, Hualong Town, Panyu, Guangzhou, GuangDong, China Tel: +8620-8489-9499 Fax: +8620-8480-3343 Website: www.grandviewscreen.com www.grandviewscreen.com.cn



Instruction Manual Of Fancy Series Motorized Screen

In-line switch motorized screen & Intelligent control motorized screen

Model: FC-M FC-MI FC-MF

Dear Customers:

Thank you for purchasing a Grandview projection screen. Before use, please read instruction carefully. After installation, please store instruction for future reference.

Preparation for installation

Accessories pack:

Φ 5x40 tapping screw X 8 pcs Expansion fixture X 8 pcs

Motor limit Floating Bracket X 2 pcs setting tool X 1 pcs Bracket X 2 pcs

- Please prepare for suitable tools such as gradienter, tape, marker, etc.
- Please make sure precise installation distance and proper installation position for upper and nether mounting brackets.
- Use the proper screws for installation according to the site. (use tapping screws for wooden wall and tapping screws with expansion fixture for concrete wall)
- After installation, screen left and right side ensure flat and level.

Wall/Ceiling installation method

 Install bracket onto wall/ceiling that can bear such weight, and keep screen two sides on a same level. (Distance from casing end with 10cm), as below figure:



 Loosen the down screw until the screw can cover the casing, as figure:



• Hold the casing two ends flatly onto the bracket then push into the bracket, when the locking tooth fixed, you will hear a locking sound that means screen already fixed onto bracket safely. Lock screw and fix screen. As figure:



Note: When taking off screen, loosen the bottom screw first and push the top loosen button, then you can easily take the screen off, as above figure:

Ceiling hanging method:

• Use ceiling hanging bracket lock into the rut and it has a hanging hole there, as figure:



- Take reference same as wall/ceiling installation, measure installation distance and mark position, the fix screen casing steady with bracket.
- According to site installation height, install hook onto ceiling, then hang the screen through bracket hole. As figure:



Warning:

Before operate screen, make sure the sticker on casing and under bar is removed.

Importance:

- Please make sure the installation position (ceiling or wall) or hang device can suffer from at least 25KG, otherwise it may cause danger.
- The product is using single-phase AC power, please use a socket with earth wire and make sure the earth wire is well connected.
- For in-line switch motorized screen, if necessary equip with extra high voltage control, please must operate by a professional engineer, and make sure central control between screen retract and screen expand has timing delay device. (0.2 second at least)

Power Connect:

Grandview screen will pre-equip with standard plug for your local market, only just connect plug to the socket, you can eniov the use of Grandview screen immediately.

Fabric control instruction

Intelligent motorized screen has 4 control options:

Open the cove A. Manual control (cycle control button) of the casing B. IR control or RF control C. Dry contact control D. RS485 or RS232 control Ô Rs485 and dry contact interface

> Cvcle control Manual control

A. Manual control:

Manual control button is on the left side of the casing (close to RS485 and dry contact interface), this is a cycle control button.

B. IR control MI or RF control MF:

- Press Up button, screen retract
- Press Stop button, screen stop
- Press Down button, screen expand
- RF remote is pre-setting in factory with the screen, also can reset if necessary.

Remote pairing:

It's the remote paring status once motor connect to the power within 10 seconds. Press UP & STOP button together for remote pairing with screen, once done. operate screen go down and go up once for test.

Remote un-pairing:

It's the remote paring status once motor connect to the power within 10 seconds. Press UP & STOP button together for clear the memory, once done, operate screen go down and go up once for test.

CTRL

123456



LED

.

MI IR remote

-Up buttor

-Stop buttor

Down

button

C. Dry contact control:

EXTERNAL Connect the 6P6C wire through RJ12 interface, count from left side, 3~6 is the control wire. 3 is common wire, 4 is stop, 5 is go down, 6 is go up.



D. RS485 or RS232 control:

Connect the 6P6C wire through RJ12 interface, count from left side, 1~2 is control wire for RS485 control. 1 is D-, 2 is D+. RS 232 wiring is as figure.



RS485/RS232 port setting:

- Baud Rate: 2400
- Data Bits: 8
- Odd-even check: None
- Stop bits: 1

Hexadecimal control code:

- Up: ff ee ee ee dd
- Stop: ff ee ee ec cc
- Down: ff ee ee ee ee Some central control need to reset address code: ff ee ee ee aa



Notice:

- While connecting the RS 232 or RS485, if after plug in still can't control screen for operation, you may need to exchange the two control wire.
- Loop resistance is under 20Ω.
- Can't work besides high voltage wire.