



PUBLIC ADDRESS SYSTEM

Deluxe stage series Instruction for use

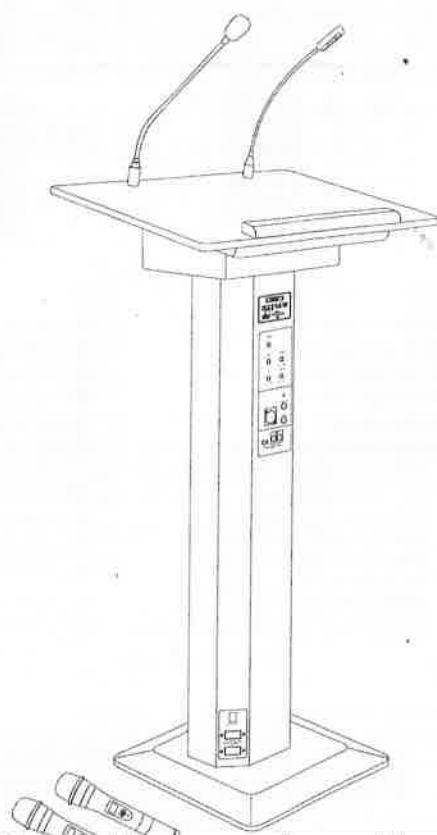

Function description:

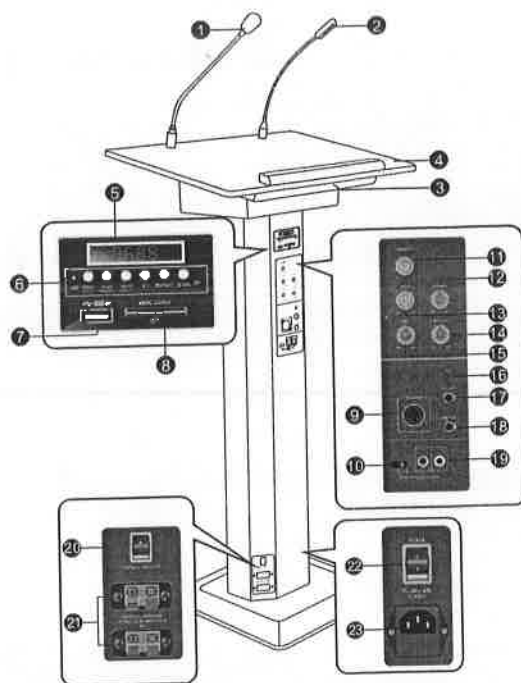

- ① Bend the microphone
- ② Small lamp lighting
- ③ The light switch
- ④ Mesa of speech
- ⑤ LED display
- ⑥ LED: MP3 player working state
- ⑦ PREV: on a curved, long press the volume reduction
- ⑧ PLAY: PLAY the suspension
- ⑨ NEXT: the NEXT song, long press the volume
- ⑩ EQ: sound mode
- ⑪ REPEAT: REPEAT mode
- ⑫ MODE: the audio source switching
- ⑬ MODE conversion key
- ⑭ U socket
- ⑮ SD/MMC card pin
- ⑯ Microphone MIC 2

- ⑰ The voice input attenuation switch
- ⑱ High regulating
- ⑲ AUX/MP3 volume
- ⑳ Bass adjustment
- ㉑ MIC/LINE 2 volume
- ㉒ MIC 1 / wireless microphone volume control
- ㉓ Power light
- ㉔ Signal output
- ㉕ Audio signal output
- ㉖ The voice input
- ㉗ Outside speakers switch
- ㉘ External interface speakers
- ㉙ Power switch
- ㉚ Power outlet

USB "MODE" key, in the condition of "LINE" MODE, long press this button 2 seconds to enter the recording state.
If out of the tape, and long press this button, such as exit after the recording, upcoming current audio content.
Note: only in cases with the U disk and SD card, have the tape.

About U - segment wireless microphone pair frequency operation instructions

The steps are as follows:

1. Turn off the power switch of the host microphone
2. Unscrew the tube of the microphone and remove the battery of the hand-held microphone.
Reinstall the battery after about 10 seconds and start operation within 1 minute.
3. Press and hold the FM button of the microphone with your finger (unscrew the lower tube of the microphone to operate) until the display screen keeps flashing, then release the button, then turn on the power switch of the host microphone, and press the FM button of the microphone again after about 3 seconds.

If the frequency check is successful, the paired microphones can only work on this host without crosstalk. The other microphone can be paired in the same way.

Note:

If the frequency check is not successful or the microphone is silent due to the misoperation of the FM button, press the power button and the FM button of the microphone at the same time, and release the button to reset the microphone after installing the battery again. If the paired microphone fails and cannot be used, you must ground A0 on the microphone receiving board of the host, then turn on the power for about 3 seconds and disconnect the power, and then turn off the ground point of A0 and start up again.

Power	220V/50~60Hz
Consumed power	100W
Frequency response	100Hz~16, 000Hz
Loss of true	0.5% (at AUX x 1W)
The output power	60W
Signal to noise ratio	MIC1:-50dB±2dB / 680ohms
	MIC2:-55dB±2dB / 600ohms
	LINE:-20dB±2dB / 50Kohms
	AUX:1.-20dB±2dB / 10Kohms
	2.-15dB±2dB / 30Kohms
	3.-10dB±2dB / 50Kohms
Signal to noise ratio	4.-3dB±2dB / 80Kohms
	> 45dB
Audio output	1V / 0dB (at AUX x 20dB)
Volume control	Bass 20dB / Treble 20dB
size	580 (L) x 420 (W) x 1100 (H) mm
Weight	29KG

Install schematic diagram:

1. With cross screws podium base;
2. With cross (M6 x 16 x 0.7 Hx5PCS) screws installation and connection podium base;
3. Use the cross screw and properly connected good podium microphone cable installation, to ensure the normal work of the podium;
4. Microphones to stage the desktop, Turn right to stage.

