

## Trouble shootings:

Please let technicians check below items, if still can't solve the problems, please contact the resellers.

- 1.The light is not on after connection power supply .
  - a. Fuse is blown out. –Replace the Fuse .
  - b. Power trouble . Check the power supply .
2. Remote controller light is not on .  
Check the batteries of controller . Replace it if need .
- 3.Remote doesn't work but light is on .
  - a. The position of Upper limit and Lower limit in same position .
  - b. Remote controller setting failed
4. Stop suddenly when it is working .  
Motor overheat .Stop using for a few minutes .

Central controller support	Group Code
Rs485 Order: Baud rate :9600	01 FE 00 01 FE 00 01 FE 00 01 FE 00 (Up)
Parity bit: NONE	02 FE 00 02 FE 00 02 FE 00 02 FE 00 (Down)
Date bit : 8	03 FE 00 03 FE 00 03 FE 00 03 FE 00 (Stop)
Stop bit : 1	FE for Public

### Point code :

Modify : 00 XX 00 00 XX 00 00 XX 00 00 XX 00

Up: 01 XX 00 01 XX 00 01 XX 00 01 XX 00

Down: 02 XX 00 02 XX 00 02 XX 00 02 XX 00

Stop: 03 XX 00 03 XX 00 03 XX 00 03 XX 00

XX MCU 00