

# Grandview®

## Large-Flat Series Integrated Tab-Tension Motorized Screen

Grandview®



Model: LF-MIXXCII

### Grandview Crystal Screen Canada Ltd.

#11- 3751 North Fraser Way,  
Marine Way Business Centre,  
Burnaby, BC, Canada V5J 5G4  
Tel: 1-604-412-9777 Fax: 1-604-412-9796  
Website: [www.grandviewscreen.ca](http://www.grandviewscreen.ca)

### Guangzhou Grandview Crystal Screen Co., Ltd.

No.43 South International Trade Avenue, Hualong Town, Panyu,  
Guangzhou, Guangdong, China 511434  
Tel: +8620-8489-9499 Fax: +8620-8480-3343  
Website: [www.grandviewscreen.com](http://www.grandviewscreen.com)




Thank you for purchasing a Grandview projection screen.

Before use, please read instructions carefully. After installation, store instructions for future reference.

Grandview®

## Description

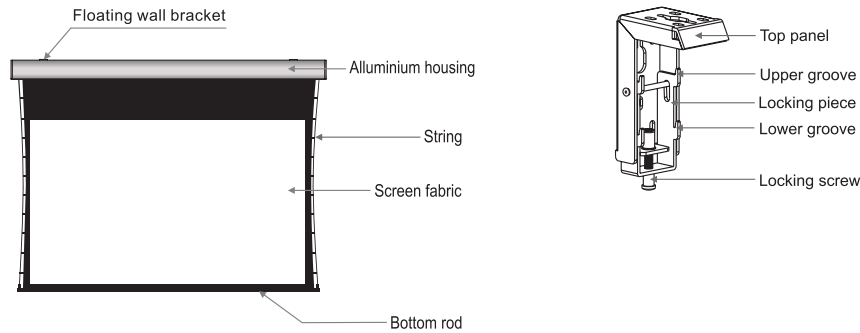

### Attention:

- > Please make sure there is no dust or dirt on the fabric surface before rolling it back to the casing
- > The recommended working time is less than 50 seconds. The motor will enter overheating protection status and stop working for every continuous 4 minutes operation, user would need to wait for a while until the motor cool down before operating again.
- > There is no lube needed for the motor. Please be noticed that the appropriate setting is optimized which requires no further adjustment, please consult the after sales team before adjusting the limits.

Locate the Yellow Hex adjuster as this is the one that adjusts the drop.

**Please do not use the Green Adjuster as this is for the stop position and is set at the factory.**

To adjust the drop limit, first you need to press the manual control to bring down the screen fully. After the screen is fully down, use the Orange Hex tool (supplied with your screen) to turn the Yellow adjuster clockwise about 10 turns, it will set the fabric to stop at higher position, then you press the manual switch up and then down again. Once the screen is fully down, you can turn the Yellow adjuster anti-clockwise, the fabric will automatically judder downwards to your desired position. And please don't set the drop limit too low from the original length (keep within 20cm) to avoid damage to the motor and fabric. Remember never over adjust more than 10 turns at one time. Less is better as more control and you will not over adjust?

## Accessories

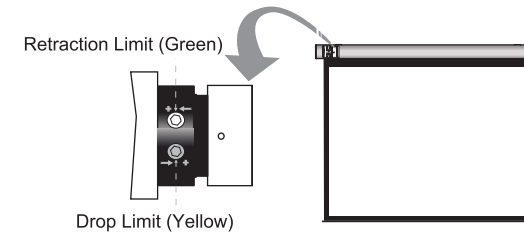
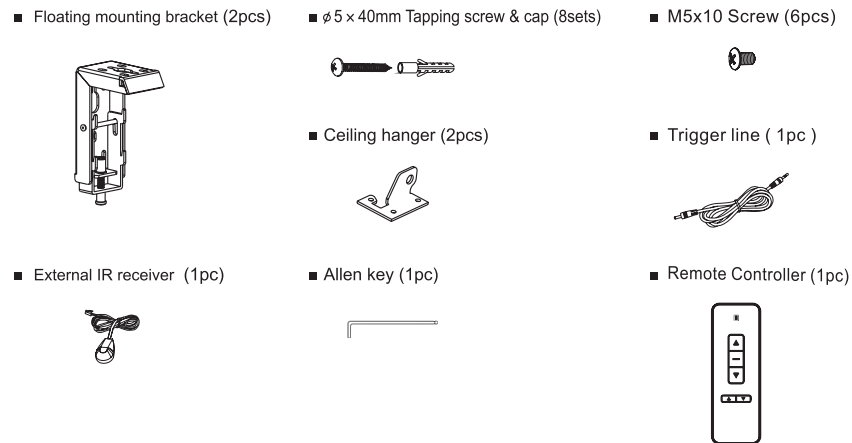


Figure 32

## Motorized Screen Power Specifications

Voltage	Frequency	Watts	Application
230V/120V/100V	50Hz/60Hz	90W/80W	Applies to motorized screen up to 120"

## How to adjust tension situation of the string

If the string is loose which is caused by bump on transportation or faulty operation (Figure 33), please rotate the String Adjustment Knob clockwise to make string tensional (Figure 34). If the string is over-tensional, please press the String Releasing Button and then rotate the String Adjustment Knob counter-clockwise to suitable tensional situation (Figure 35).

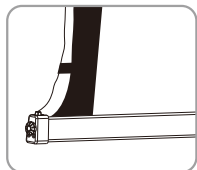


Figure 33

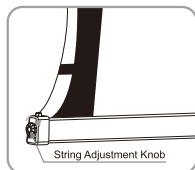


Figure 34

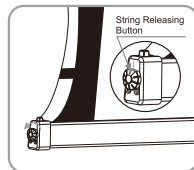








Figure 35

## Warnings

- The ceiling or wall used for fixture installation must be secure to prevent the screens from falling.
- While installing electrical motors, please hire professionals or your local dealer to ensure safety. A misconnection may lead to fire or leaks.
- Make sure the Fixing screw be fastened when using the wall bracket, to avoid any damage.
- Keep all infrared wireless products away from fluorescent lighting as it may cause malfunctions.
- Please read the following as any damage to the screen surface will affect the quality of the picture:
  - 1.Avoid contact or touching the screen surface as it may cause scratches or tears.
  - 2.Do not write or draw on the surface.
  - 3.Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
- Roll up the screen after every use. Ensure that the screen is level when installing; do not pull on the sides or fold the screen.
- To prevent unnecessary damage, the operating and maintenance of the screen should be done by adults.

 Ignoring the safety warnings may lead to injuries and/or damaging the product.	 Fixtures should be installed in a secure place to avoid accidents or the screen falling.
 Do not connect any electrical attachments or remote controls.	 Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to loosen.
 Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.	 Refrain from hanging anything on the screen as it may cause the screen to fall.

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

## Installation

Take out all the parts from the package and following the accessories guideline ensure all the parts are there. There are three different types of installation available for this product: wall mount, ceiling mount or ceiling hang. Depending on the installation environment, the floating mounting brackets can be installed at various points for your convenience. However, the ideal position for the mounting brackets is closer to the endcap as this will reduce vibration and noise.

### Wall and Ceiling Mount Installation

- 1.According to the surface of installation, choose the appropriate screws needed for mounting (regular screws for wood surfaces, tapping screws for concrete surfaces)
- 2.Mount the brackets onto the surface, ensuring it is level (tip: draw a erasable level line when mounting the brackets). See below for picture description (figure 1):

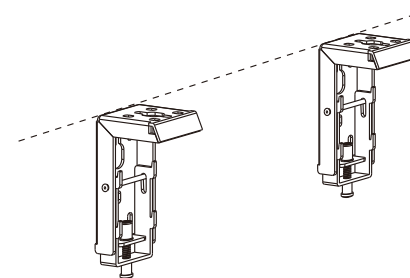


Figure 1

### Installation Steps:

- 1.Wood wall and ceiling installation: Drill in the  $\phi 5 \times 40$  screws through the appropriate holes in the bracket (figure 2-3)
- 2.Drywall and ceiling installation: Install the anchors and drill in the  $\phi 5 \times 40$  screws into the appropriate bracket holes (figure 4-5)

Wood wall installation

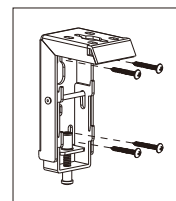


Figure 2

Wood ceiling installation

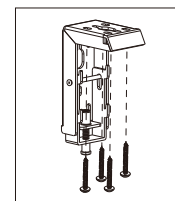


Figure 3

Concrete wall installation

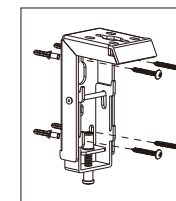


Figure 4

Concrete ceiling installation



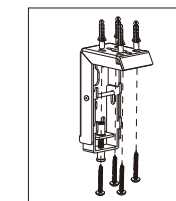


Figure 5


3. Loosen the locking screw to lower the locking piece down all the way (figure 6-7)

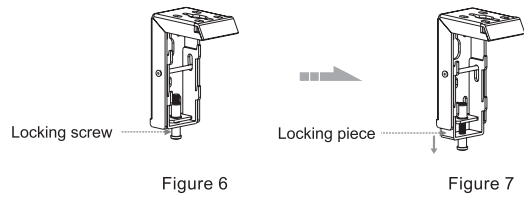

4. When mounting the screen onto the floating mounting brackets, ensure the grooves on the screen casing match up with the upper and lower grooves on the brackets. Simply slide in, and bracket's grooves will hold the casing in place. Horizontal adjustments can still be made (figure 8-10).

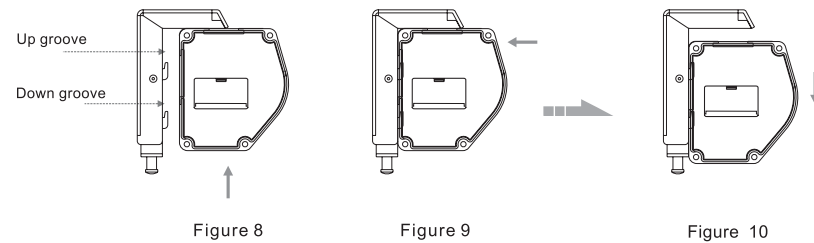




5. To lock the screen in place, close and tighten the locking screw on the mounting brackets. This will keep the screen casing locked firmly in place (figure 11-12).

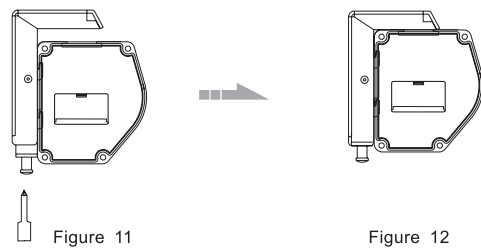


## Other Control Options Description

### 1. FM to IR control description:

When you insert the Wireless Synchro Converter Receiver into the EXTR slot of the control panel, you can use a FM wireless remote control device. (figure 27). The Intelligent Synchro Power Supply Control Adaptor (for all projectors) combined with the wireless 12V trigger (for all projectors with a trigger output) can control the screen together. (figure 28-29)

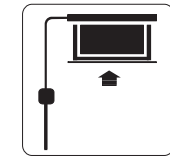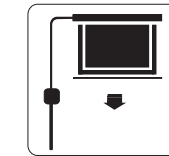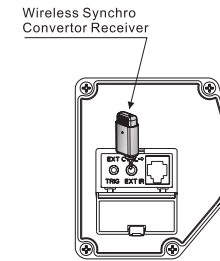


### 二. External Wall Switch

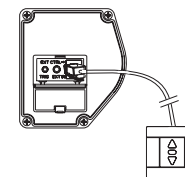

Manual control for screen up/stop/down.

### 三. External Intelligent Wall Switch Connection

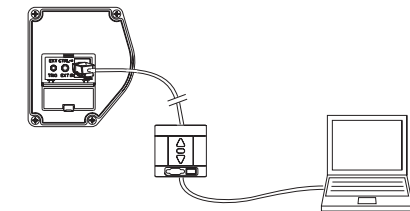

1. Control for screen up/stop/down when connected to the control panel interface of the screen.
2. Control for screen up/stop/down when connected to the computer's RS232 or USB interface.

## Automatic Trigger Control Description

1. Insert one end of the trigger wire into the trigger jack located on the left side of the screen casing's end cap labeled "TRIG". (figure 22). Insert the other end into the 12V output.
2. When the projector is powered on, the screen will lower automatically. When the projector is powered off, the screen will retract automatically.

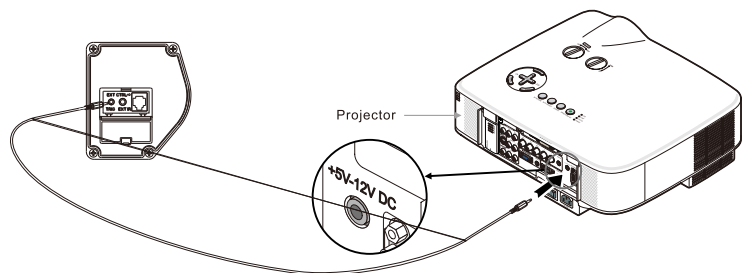


Figure 22

## External Controls Description (Central Control or R232, Grandview Wall Switch)

Insert one end of the signal cord into the computer output jack located on the left side of the screen casing's end cap and the other end of the signal cord to the central control jack, RS232 or Grandview wall switch. (figure 23-24). You can then control the screen via central control or computer.

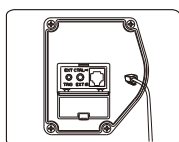


Figure 23


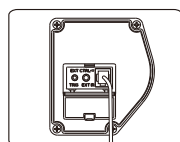


Figure 24

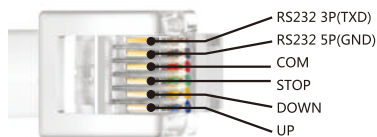

### RS232 interface settings

bps:2400  
data bit:8  
parity check: no  
stop bit:1  
control code:  
up: 0xff,0xee,0xee,0xdd  
stop: 0xff,0xee,0xee,0xcc  
down: 0xff,0xee,0xee,0xee

## Infrared (IR) Remote Control Description

1. In order for the IR remote control to work, please ensure there is nothing covering the built-in sensor on the screen casing.
- For installations where the built-in sensor on the screen casing will be covered, use the external IR receiver (provided) and insert it into the external IR slot on the screen casing's left end cap. Ensure the external IR receiver head is in a position where it can receive the remote control signal.

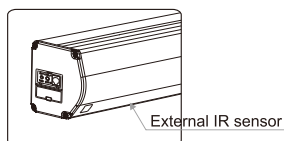


Figure 23

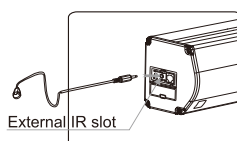


Figure 24

## Ceiling Hang Installation

Choose tapping screws with hangers (or other screws with hangers, not provided) according to your ceiling material. 5 x 40mm for wood ceilings and tapping screws for concrete ceilings are recommended.

1. Drill two identical holes with an electrical drill and ensure it is horizontal with the Wall. Fasten hangers (not provided) into the ceiling (figure 13).

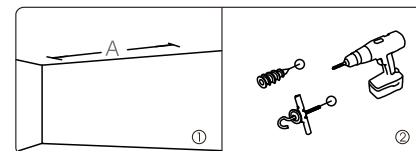


Figure 13

2. Use the M5 x 10 screws provided in the accessory package to fix the ceiling hanger into the wall bracket. Ensure the tightening screws on the wall bracket are tightened and secure. (figure 14-15)

 


Figure 14

 


Figure 15

3. After inserting the ceiling hanger, ensure the grooves on the case housing match up with the mounting bracket. To secure the case housing into the brackets, tighten the locking screws. (figure 16-17)

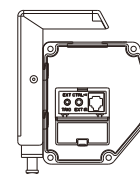


Figure 16

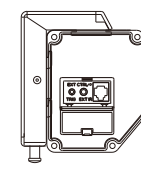


Figure 17

4. After completing steps 2 and 3, check to see whether the wall bracket is securely fixed onto the housing of the screen before hanging. Hang screen as shown below. (figure 18)



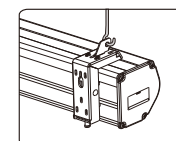


Figure 18

## Remote Control Instruction

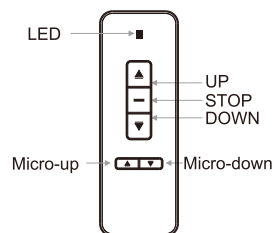

Model:AC127

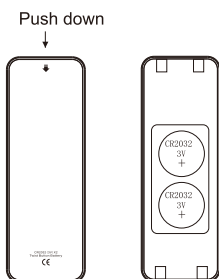

### Button Function and Operation Instruction :

- 1.Press UP button to lift the screen
- 2.Press STOP button to stop the screen
- 3.Press DOWN button to lower the screen
- 4.Press MICRO-UP button to retract the screen in small increments(150ms for each movement)
- 5.Press MICRO-DOWN button to lower the screen in small increments (150ms for each movement)

### Cautions:

- 1.The minimum distance between Controller and Receiver: 50cm
- 2.Workable within 8m in horizontal direction from the Receiver to the Controller
- 3.Do not cover the Controller's launching port while operation
- 4.Strictly ban operation in wet or high temperature environment.
- 5.Replacing batteries when the signal is faint or no signal.
- 6.Batteries for the Controller: 2 units CR2032 button cells.

### Batteries Installation Instruction:

When the signal of the Controller is faint, please replace the batteries as follow steps:

- 1.Reverse Controller to the back, push down as the arrow mark to open the cover.
- 2.Install two cells of battery and set the direction of positive and negative electrode just like the chart shows.
- 3.Close the battery cover.

## Functions

Press down and open the end cap lid to access the control interface. When not in use, close to the lid to conceal the control interface.



Figure 19

## Operating Instructions

### Connecting to an external power source:

- 1.Remove the glued on cloth on the bottom rod to ensure the rod is free from the casing.
- 2.Switch on the power. (with the appropriate voltage)

### How to use the Manual/Remote Control Switch Button (Figure 20-21)

This motorized screen has 4 types on control options: infrared (IR) remote control, manual control, triggered control, and external control (central control or RS232/USB).

### Other Control Options (optional)

- 1.Convert the infrared control to a FM wireless control using the Wireless Synchro Converter Receiver.
- 2.Control using the Intelligent Synchro Power Supply Control Adaptor for inline control with the projector. Please refer to specific manual instructions if options A and B are paired.

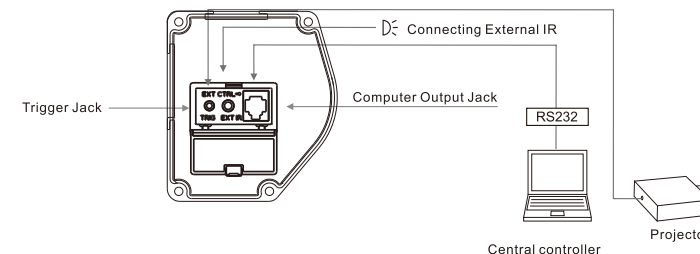


Figure 20

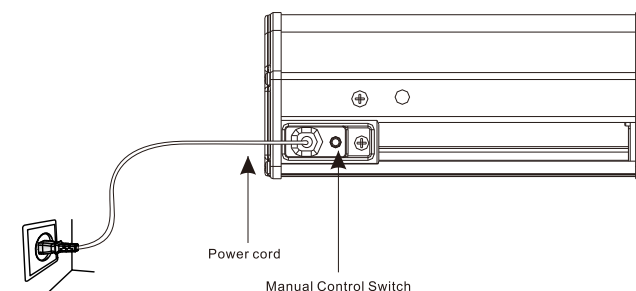


Figure 21

Switch control follows this priority: Down-Stop-Up-Stop-Down